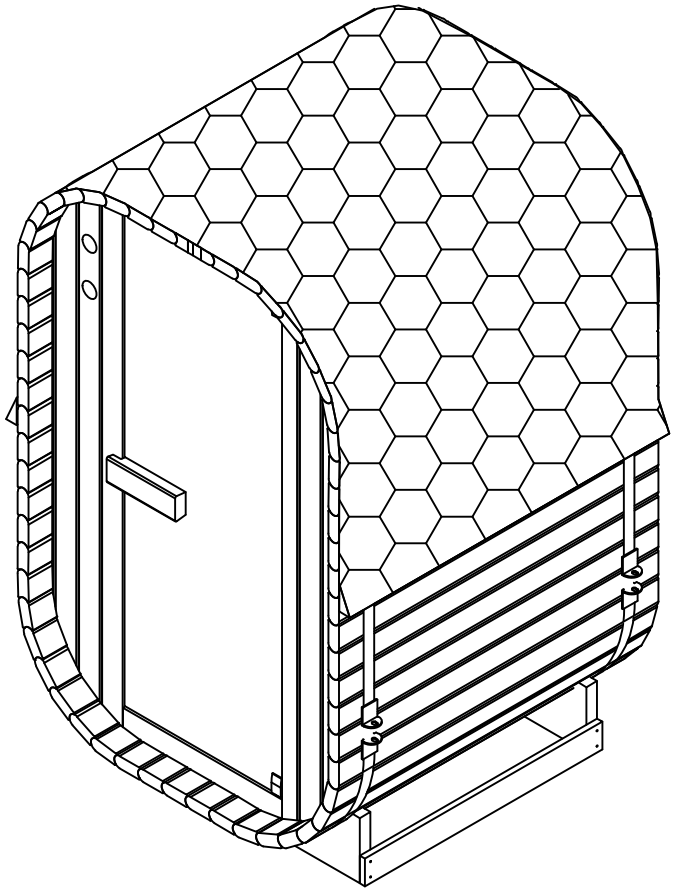
User's manual

Cube Sauna 120S



EN

PREFACE

Thank you very much for purchasing our product.
Please read this manual carefully before assembling and save it afterwards.

ATTENTION

Installation and repair should only be done by a qualified electrician!
Check power supply rating and make sure the grounded outlet is correctly connected before installation.
Use original parts only. Do not share the outlet with any other appliances.
When not in use, turn off the cabin's power unit.
Locate your cabin on a flat, level and dry surface.
There will be some smell and smoke from the sauna heater rod while starting the first time. It is normal, please keep the door open and do not use the sauna for the first starting if you can not stand the smell, please keep the sauna is on for 1 hour for the first time, we suggest you sauna while second time the stove running.
Remember,please don't go away if the sauna is on.

DANGER

Covering the heaters causes a fire hazard due to overheating. Do not cover the heaters !
Keep flammable or easily combustible materials/objects (eg.towels) away from the heater at all times.
Do not touch the heater during and shortly after use as a burning hazard exists due to hot parts.
Should the electrical connection get damaged, it must be replaced-either by the manufacturer or by a licensed electrician!

WARNING

If you suffer from illness or other health-related problems, especially heart conditions or circulatory disturbances or if you take medication, you should consult a doctor before using the Sauna.

Children and frail persons should never be in the cabin without supervision.

If you feel uncomfortable while using the Sauna, stop immediately and consult with your doctor.

Never go to a hot Sauna if you have taken alcohol, strong medicines or narcotics.

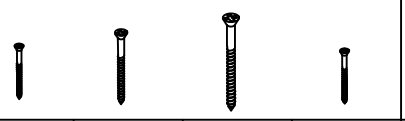


This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children less than 8 years shall not use the appliance, children 8 years and older shall only use the appliance when supervised. Cleaning and user maintenance shall not be made by children without supervision.

The power supply shall be fitted with an instantaneous residual current device (RCD) with $I\Delta n \leq 30$ mA.

Technical data

Model		Cube Sauna 120S
Cabin material		Spruce wood
Width		1200MM
Depth		1200MM
Height		1940MM
Voltage		230V
Radiators	Type	Sauna stove
	Total output	3.6KW

Hardware parts (variations possible)

										
⌀4x30	Ø4x40	Ø4x60	Ø3*16	Ø4x12	Ø6x60	⌀12x200	M12	Ø12/Ø24	Ø60	200*60*0.5
10x	155x	23x	5x	5x	2x	2x	4x	4x	1x	4x

		 washer for handle		 Wood cover			 Hinge	 washer for hinge	 plastic feet	
Ø58	30*20*2	Ø20	Ø12	Ø10.5 x Ø16	M18	Ø60*10	2x	2x	6x	4x
1x	1x	4x	4x	3x	1x	1x				

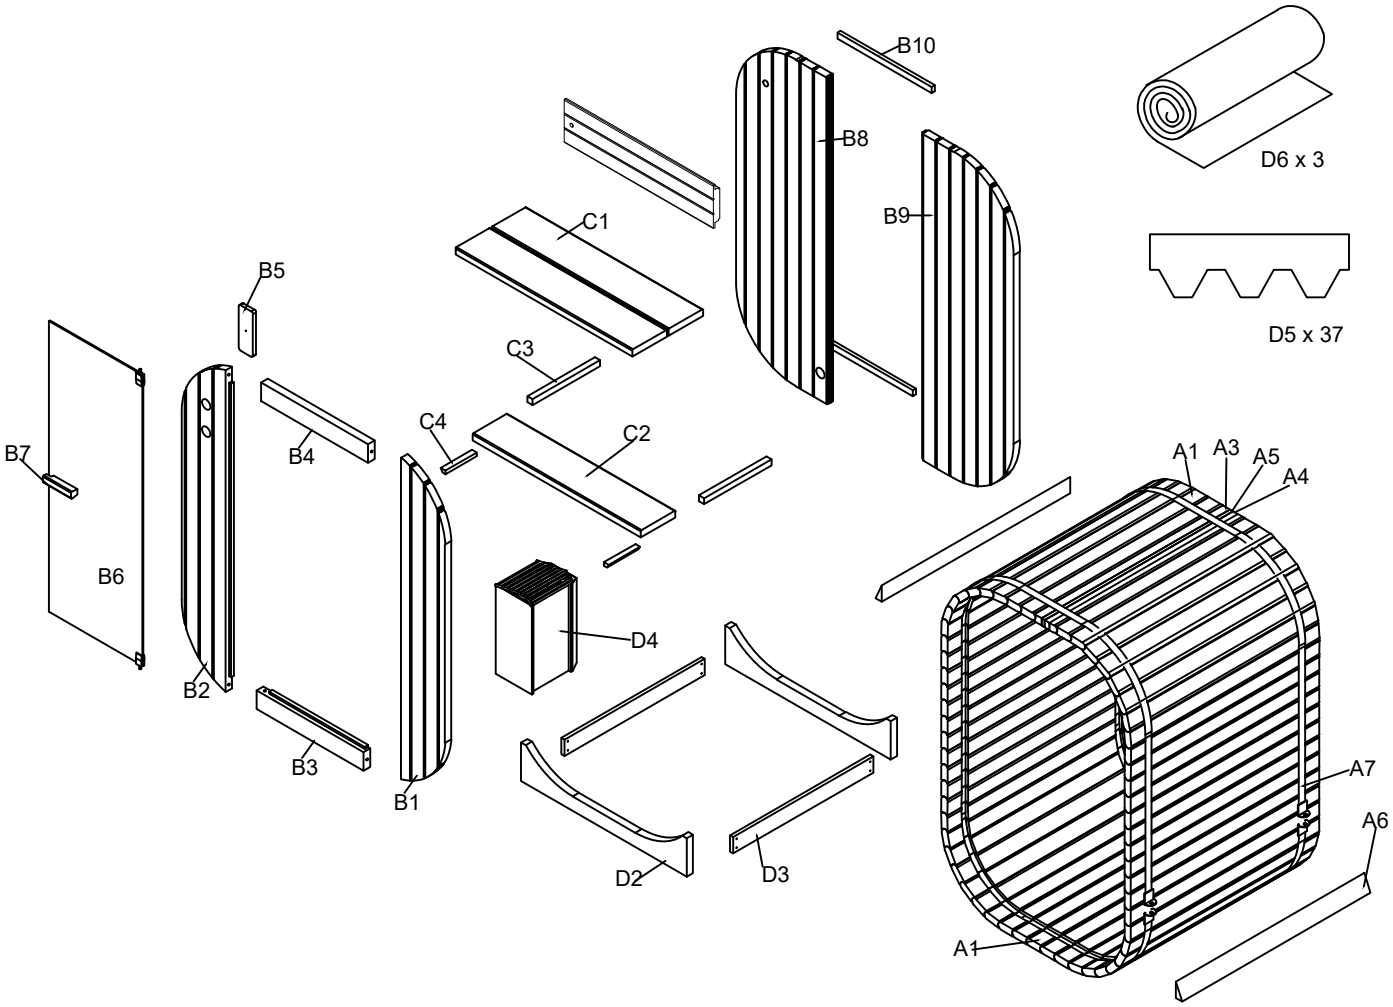
ASSEMBLE INSTRUCTIONS

Assemble tips

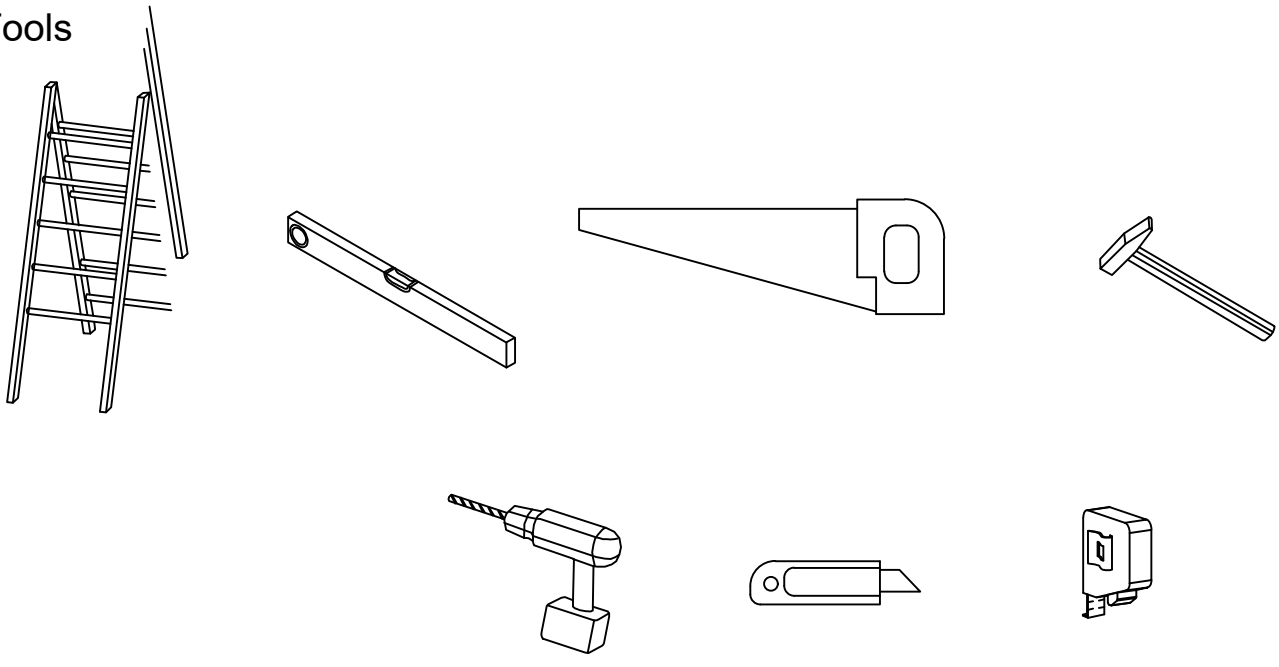
Please remove transport packaging and inspect that your sauna has been delivered complete and intact before beginning assemble.

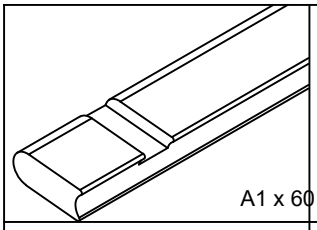
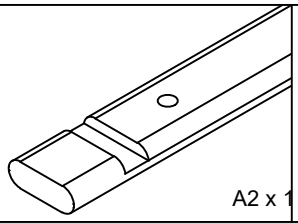
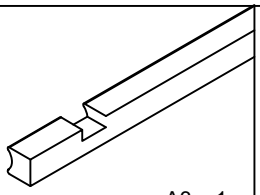
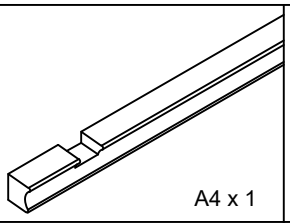
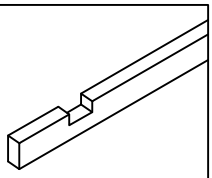
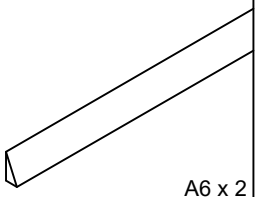

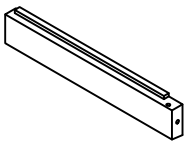
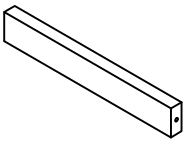
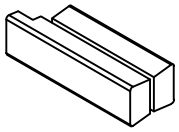



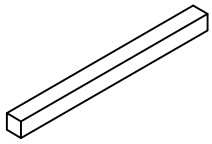

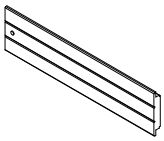
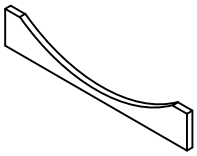
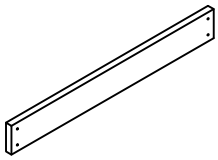


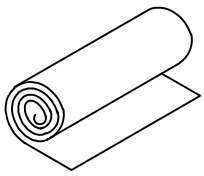


A least 2 persons are required for assemble of the cabin.

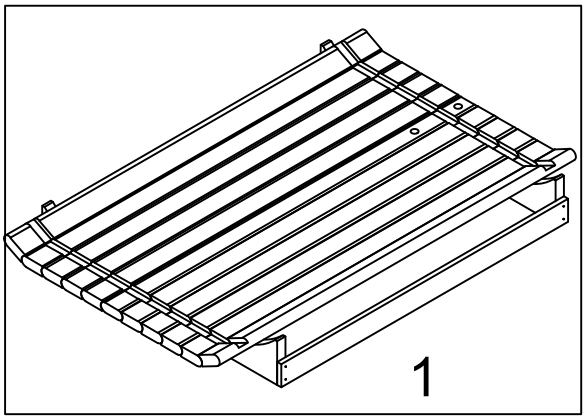
Please check the countersink and hole diameter of the drill holes to avoid damaging the wood.

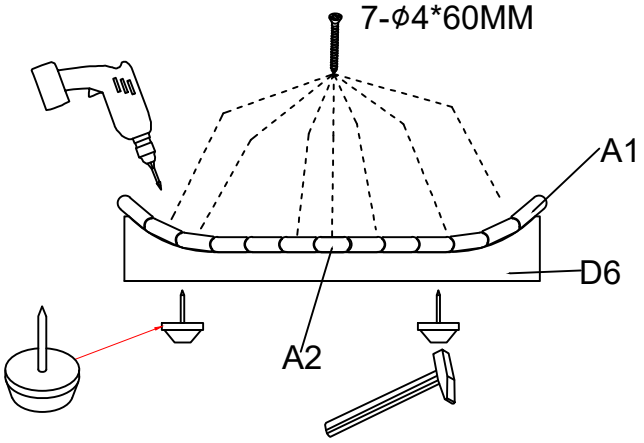

B10
B8
B9
C1
B5
C3
C4
C2
B7
B4
B6
B2
B3
B1
D4
D2
D3
A1
A3
A5
A4
A7
A6
A1
D6 x 3
D5 x 37

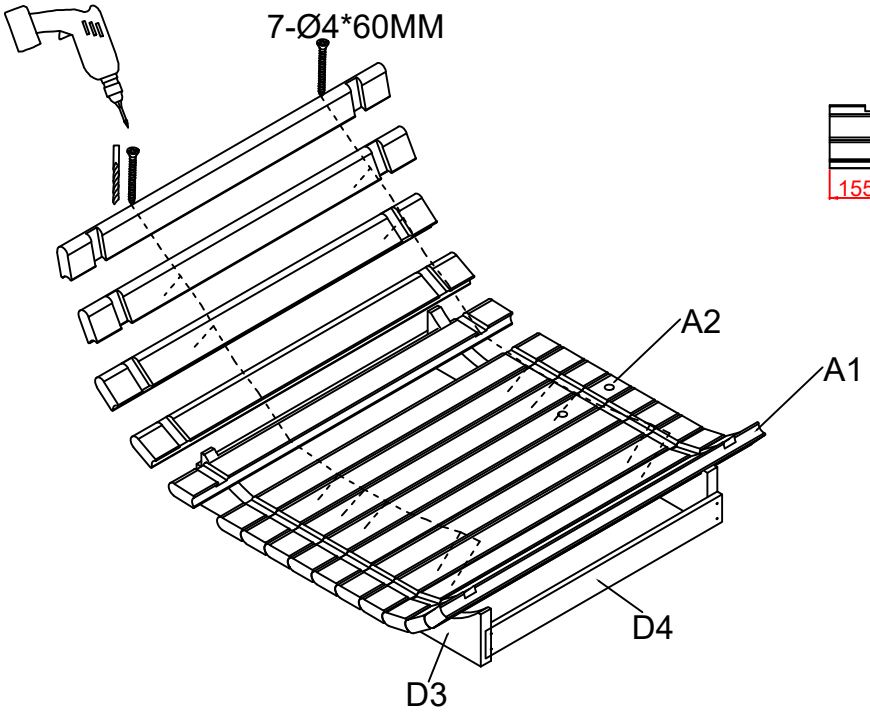
Tools



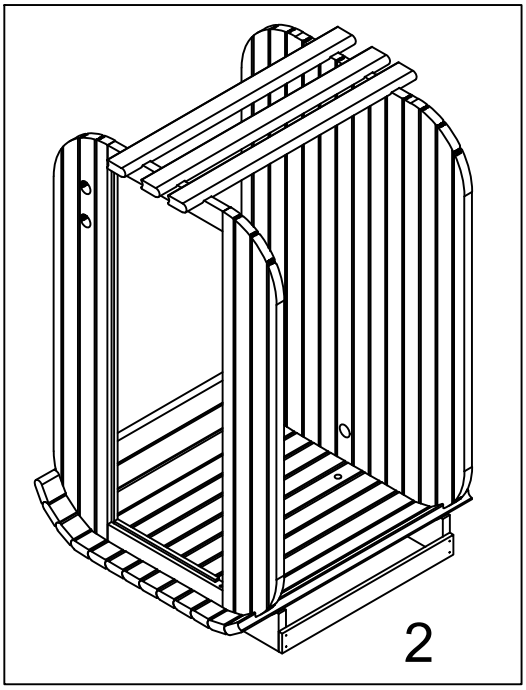
 A1 x 60	 A2 x 1	 A3 x 1	 A4 x 1	 A5 x 1
1200*97*38MM	1200*97*38MM	1200*47*38MM	1200*47*38MM	1200*38*(10)(20)(30)MM
 A6 x 2	 A7 x 2	 B1 x 1	 B2 x 1	 B3 x 1
1200*38*20MM	5330*40*4MM	1800*280*38MM	1800*293*38MM	599*100*38MM
 B4 x 1	 B5 x 1	 B6 x 1	 B7 x 1	 B8 x 1
599*90*38MM	250*90*20MM	1604*595*6MM	300*80*40MM 252*80*40MM	1800*590*38MM
 B9 x 1	 B10 x 2	 C1 x 2	 C2 x 1	 C3 x 2
1800*580*38MM	600*33*20MM	1126*210*38MM	1070*210*38MM	430*33*33MM
 C4 x 2	 D1 x 1	 D2 x 2	 D3 x 2	 D4 x 1
200*33*33MM	1070*270*46MM	1055*170*38MM	892*90*18MM	Sauna stove
 D5 x 37	 D6 x 3	 D7 x 1	 D8 x 1	 D9 x 1
1010*320MM	1220*1000MM			

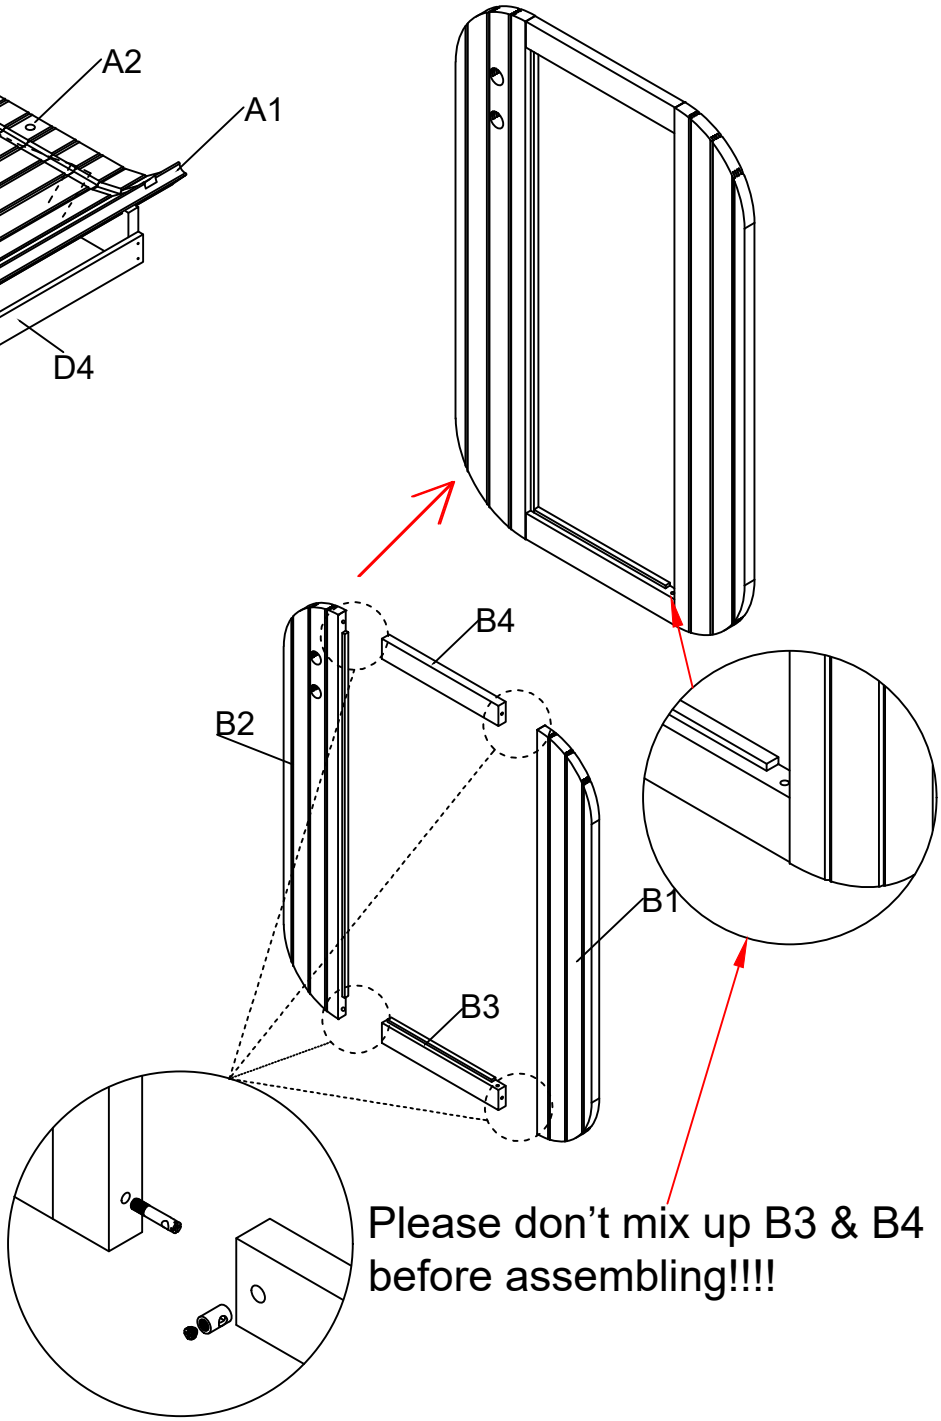




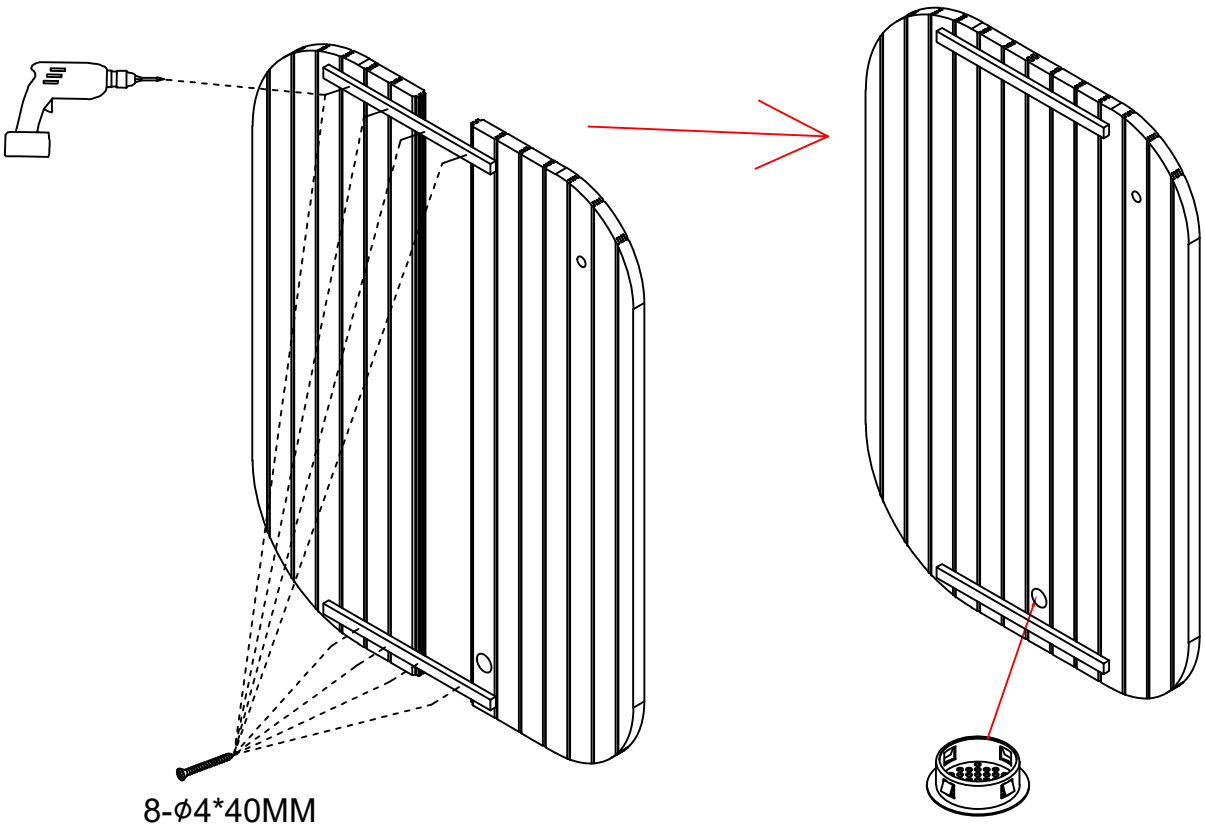


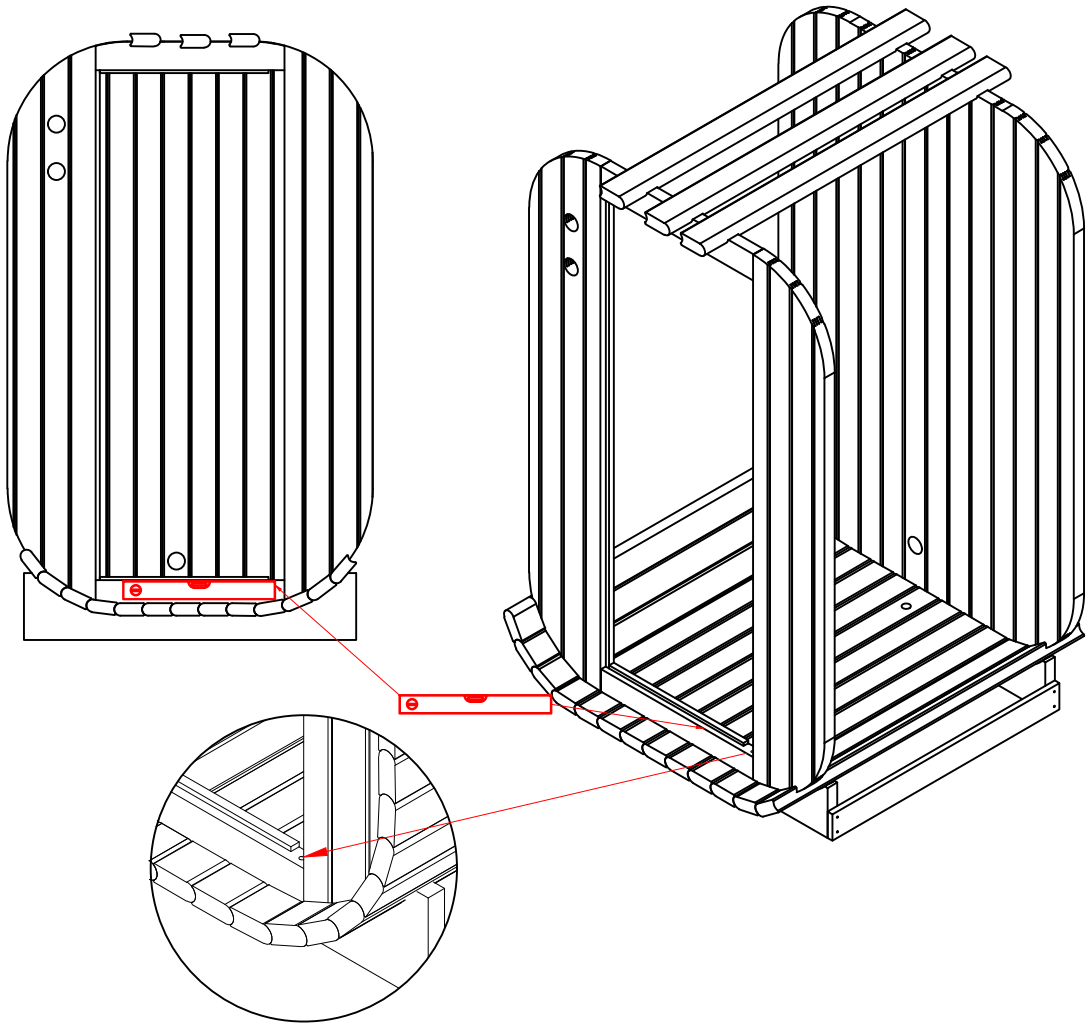


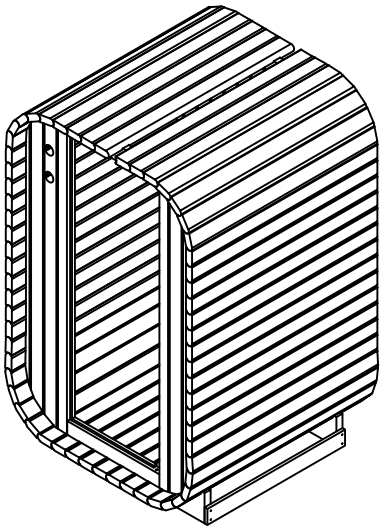


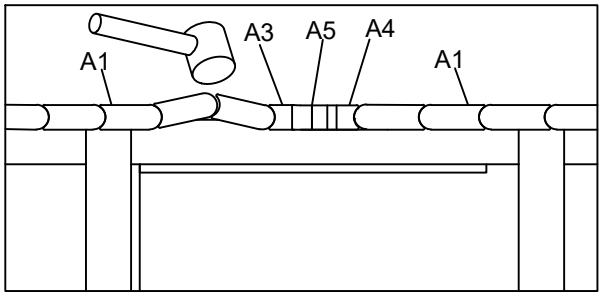


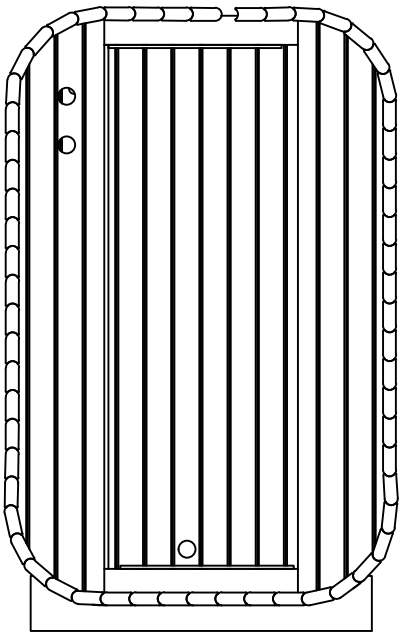
Please don’t mix up B3 & B4 before assembling!!!!

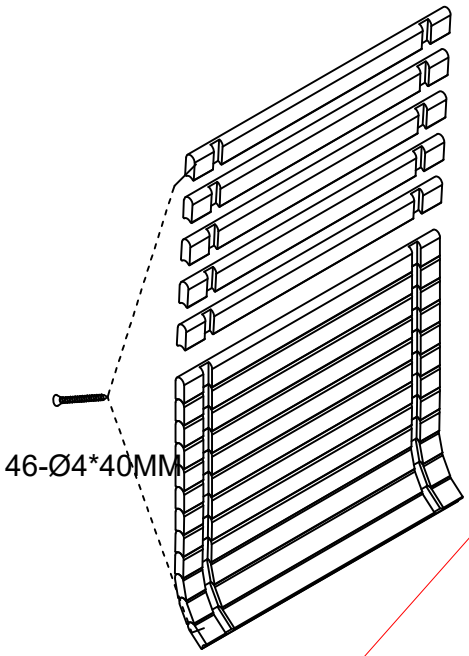

8-ϕ4*40MM

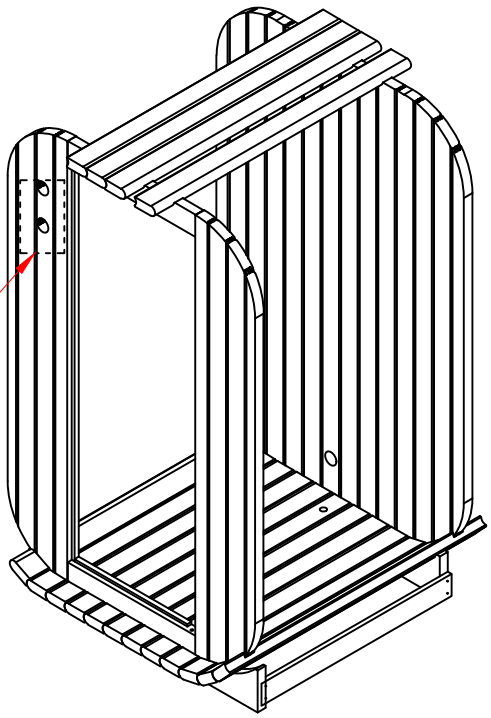


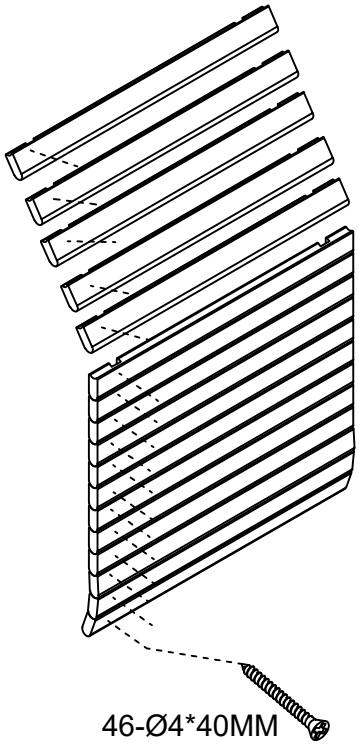


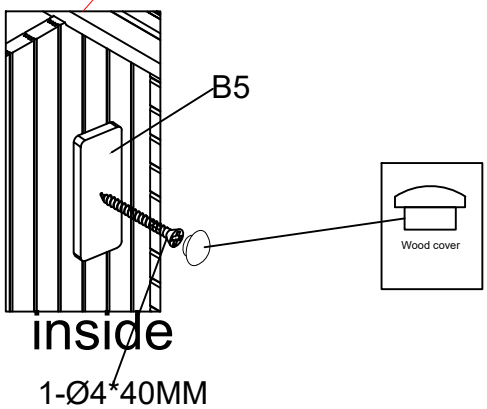

A1
A3
A5
A4
A1

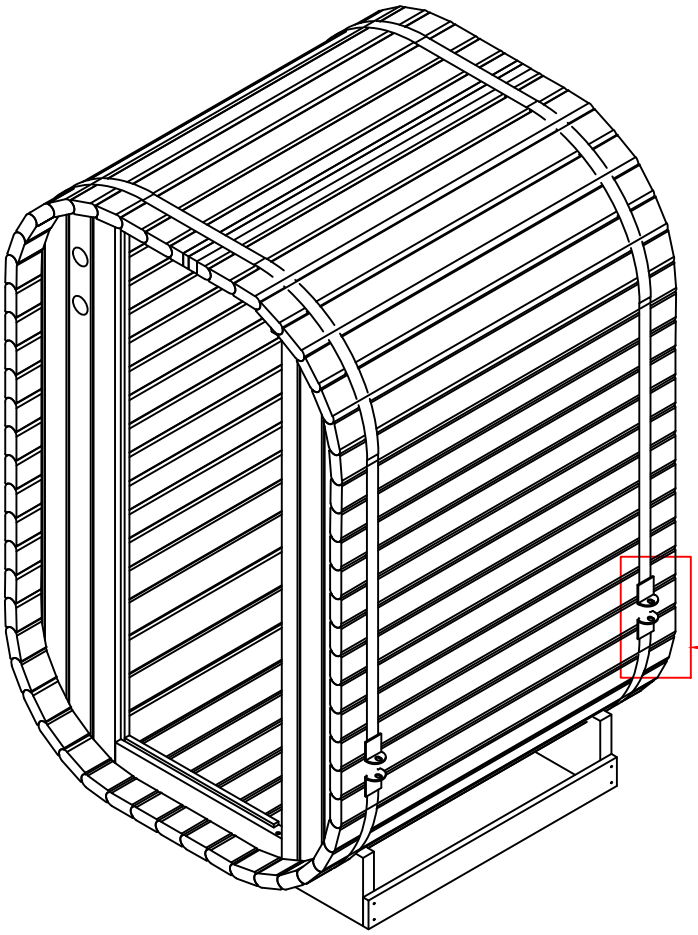


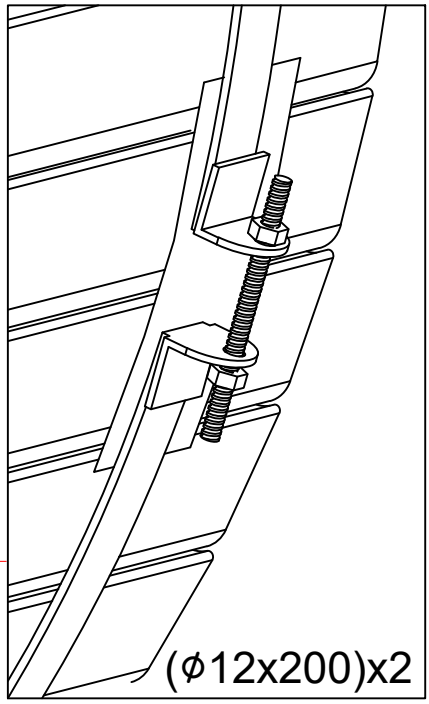

46-Ø4*40MM

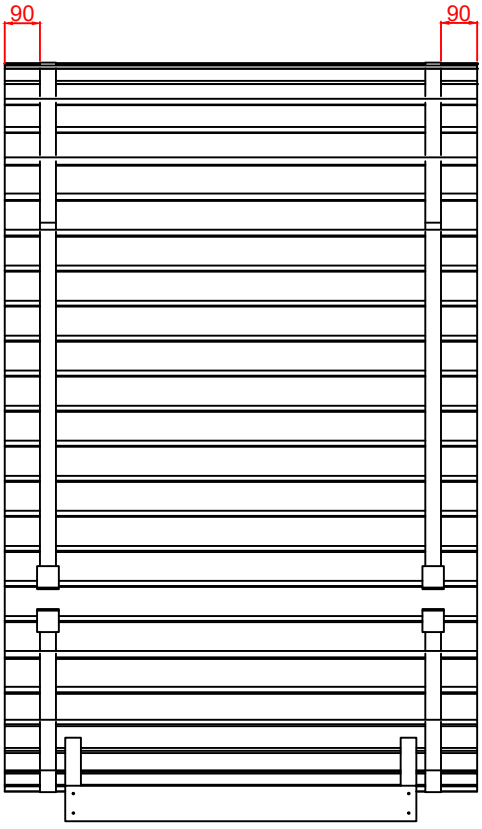


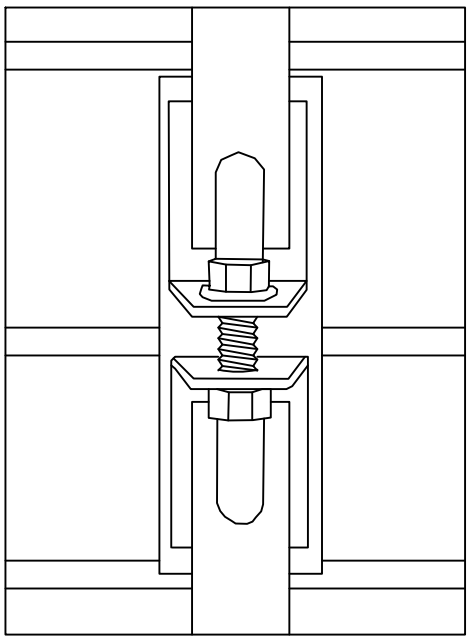

46-Ø4*40MM


B5
Wood cover
inside
1-Ø4*40MM

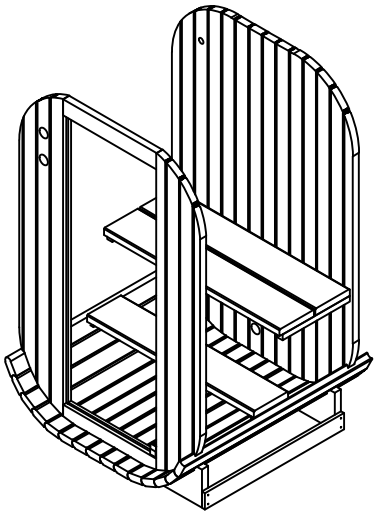


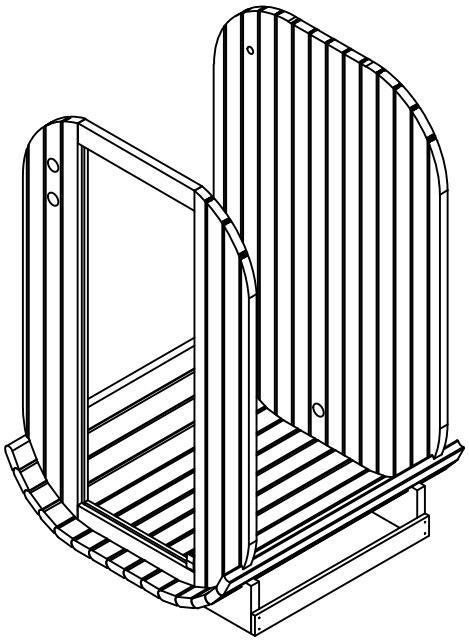


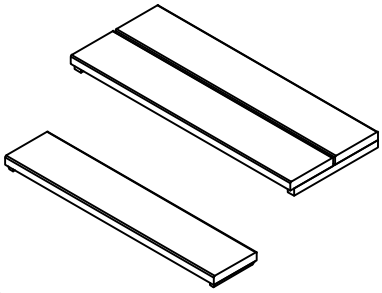


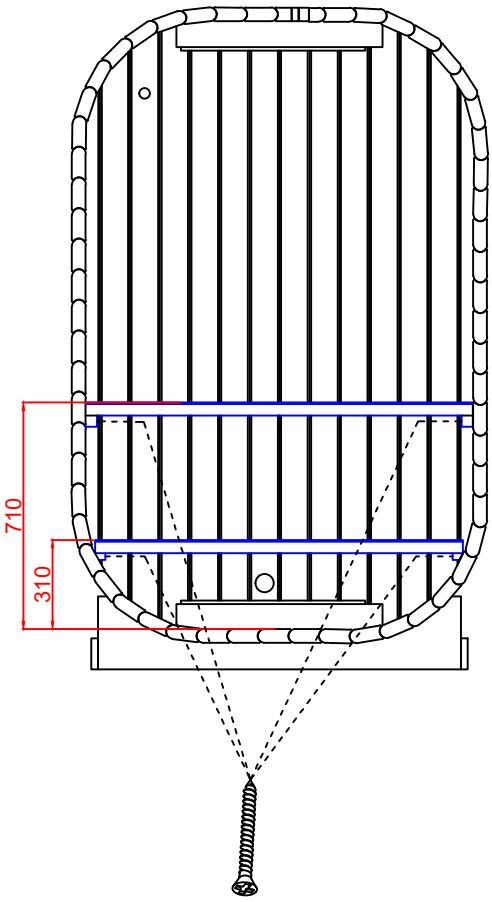


M12	Ø12/Ø24	Ø12	60x200 x0,5
4x	4x	4x	4x

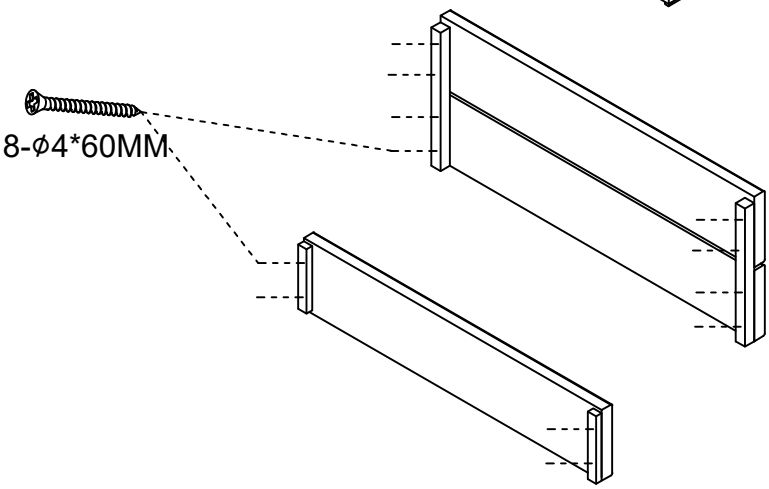


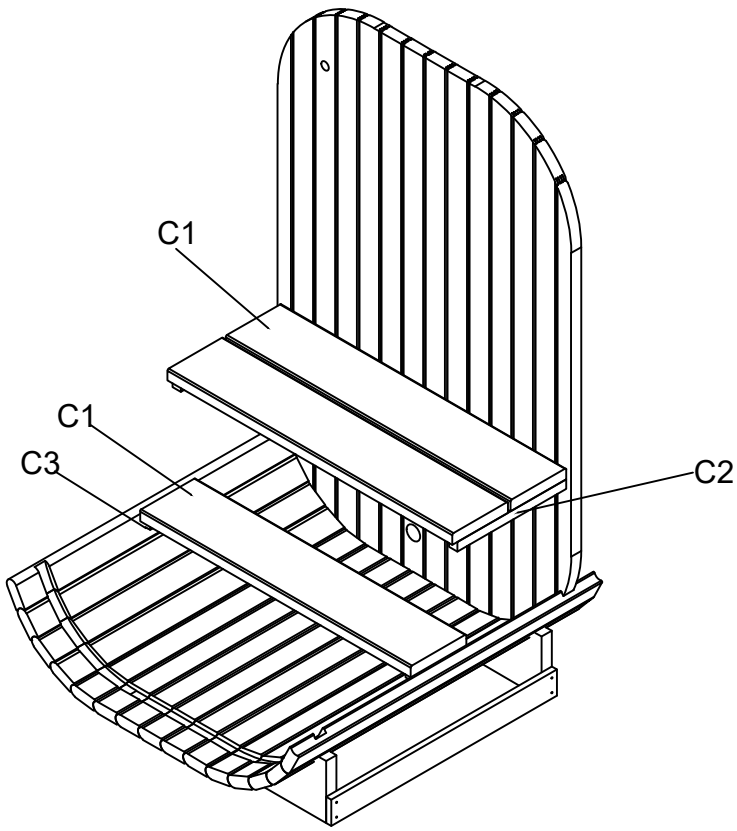


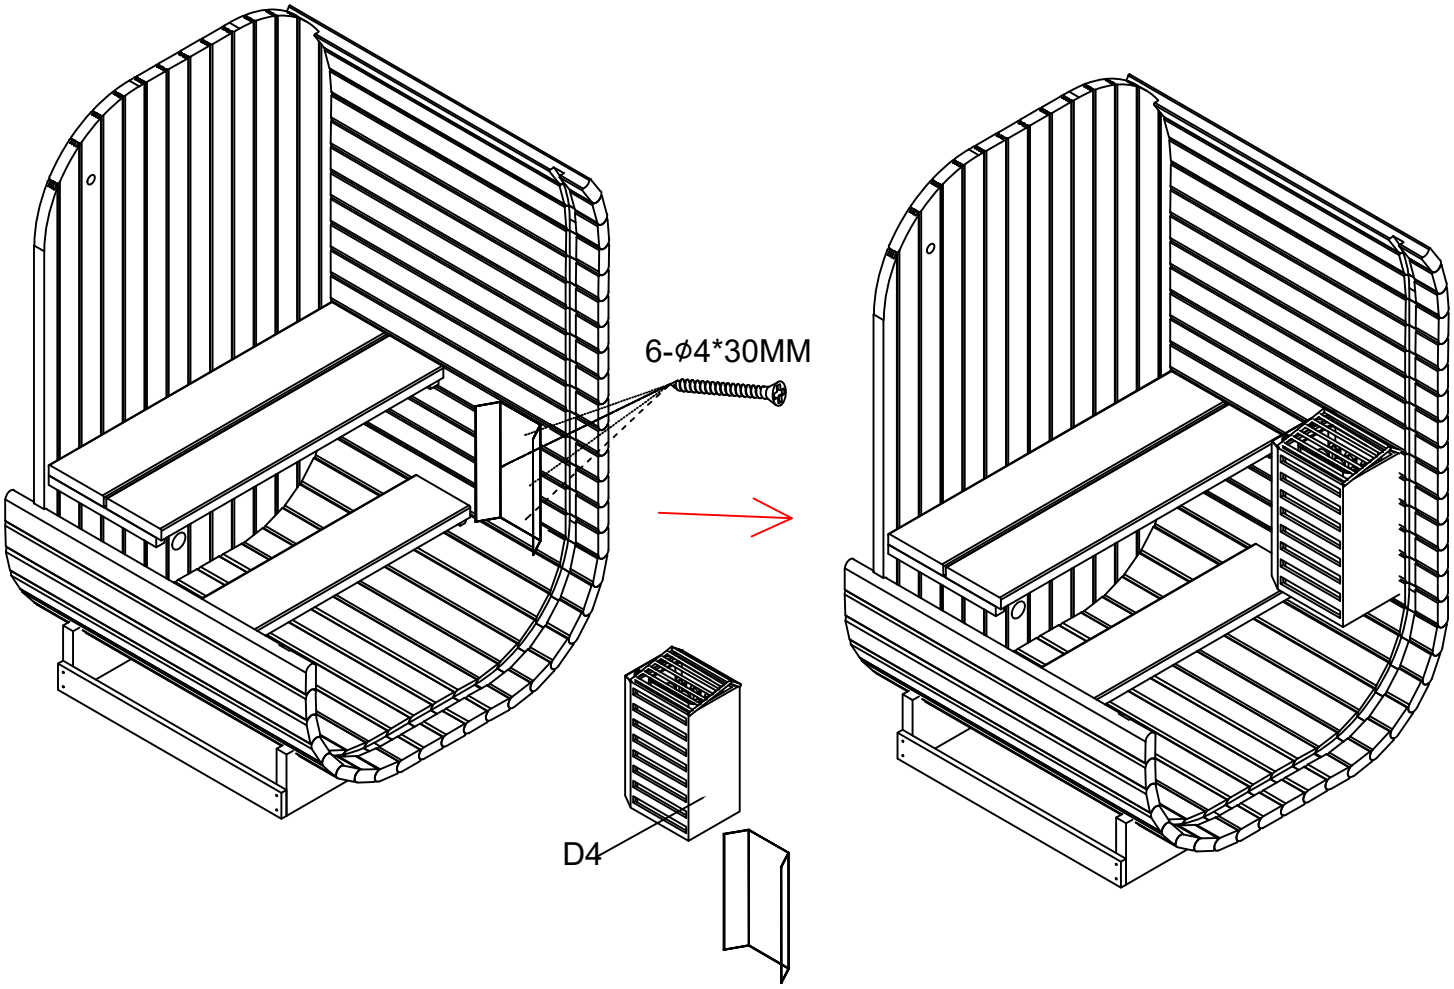


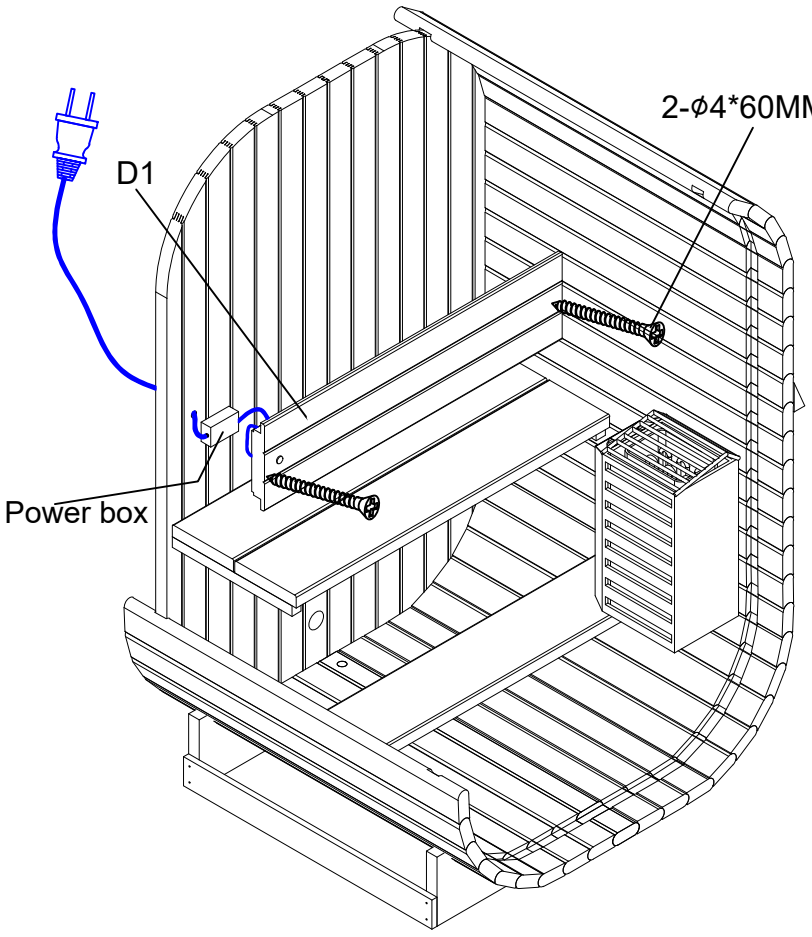


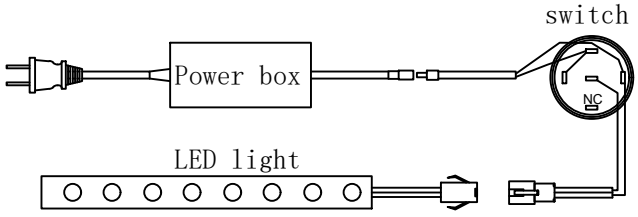
8-ϕ4*60MM

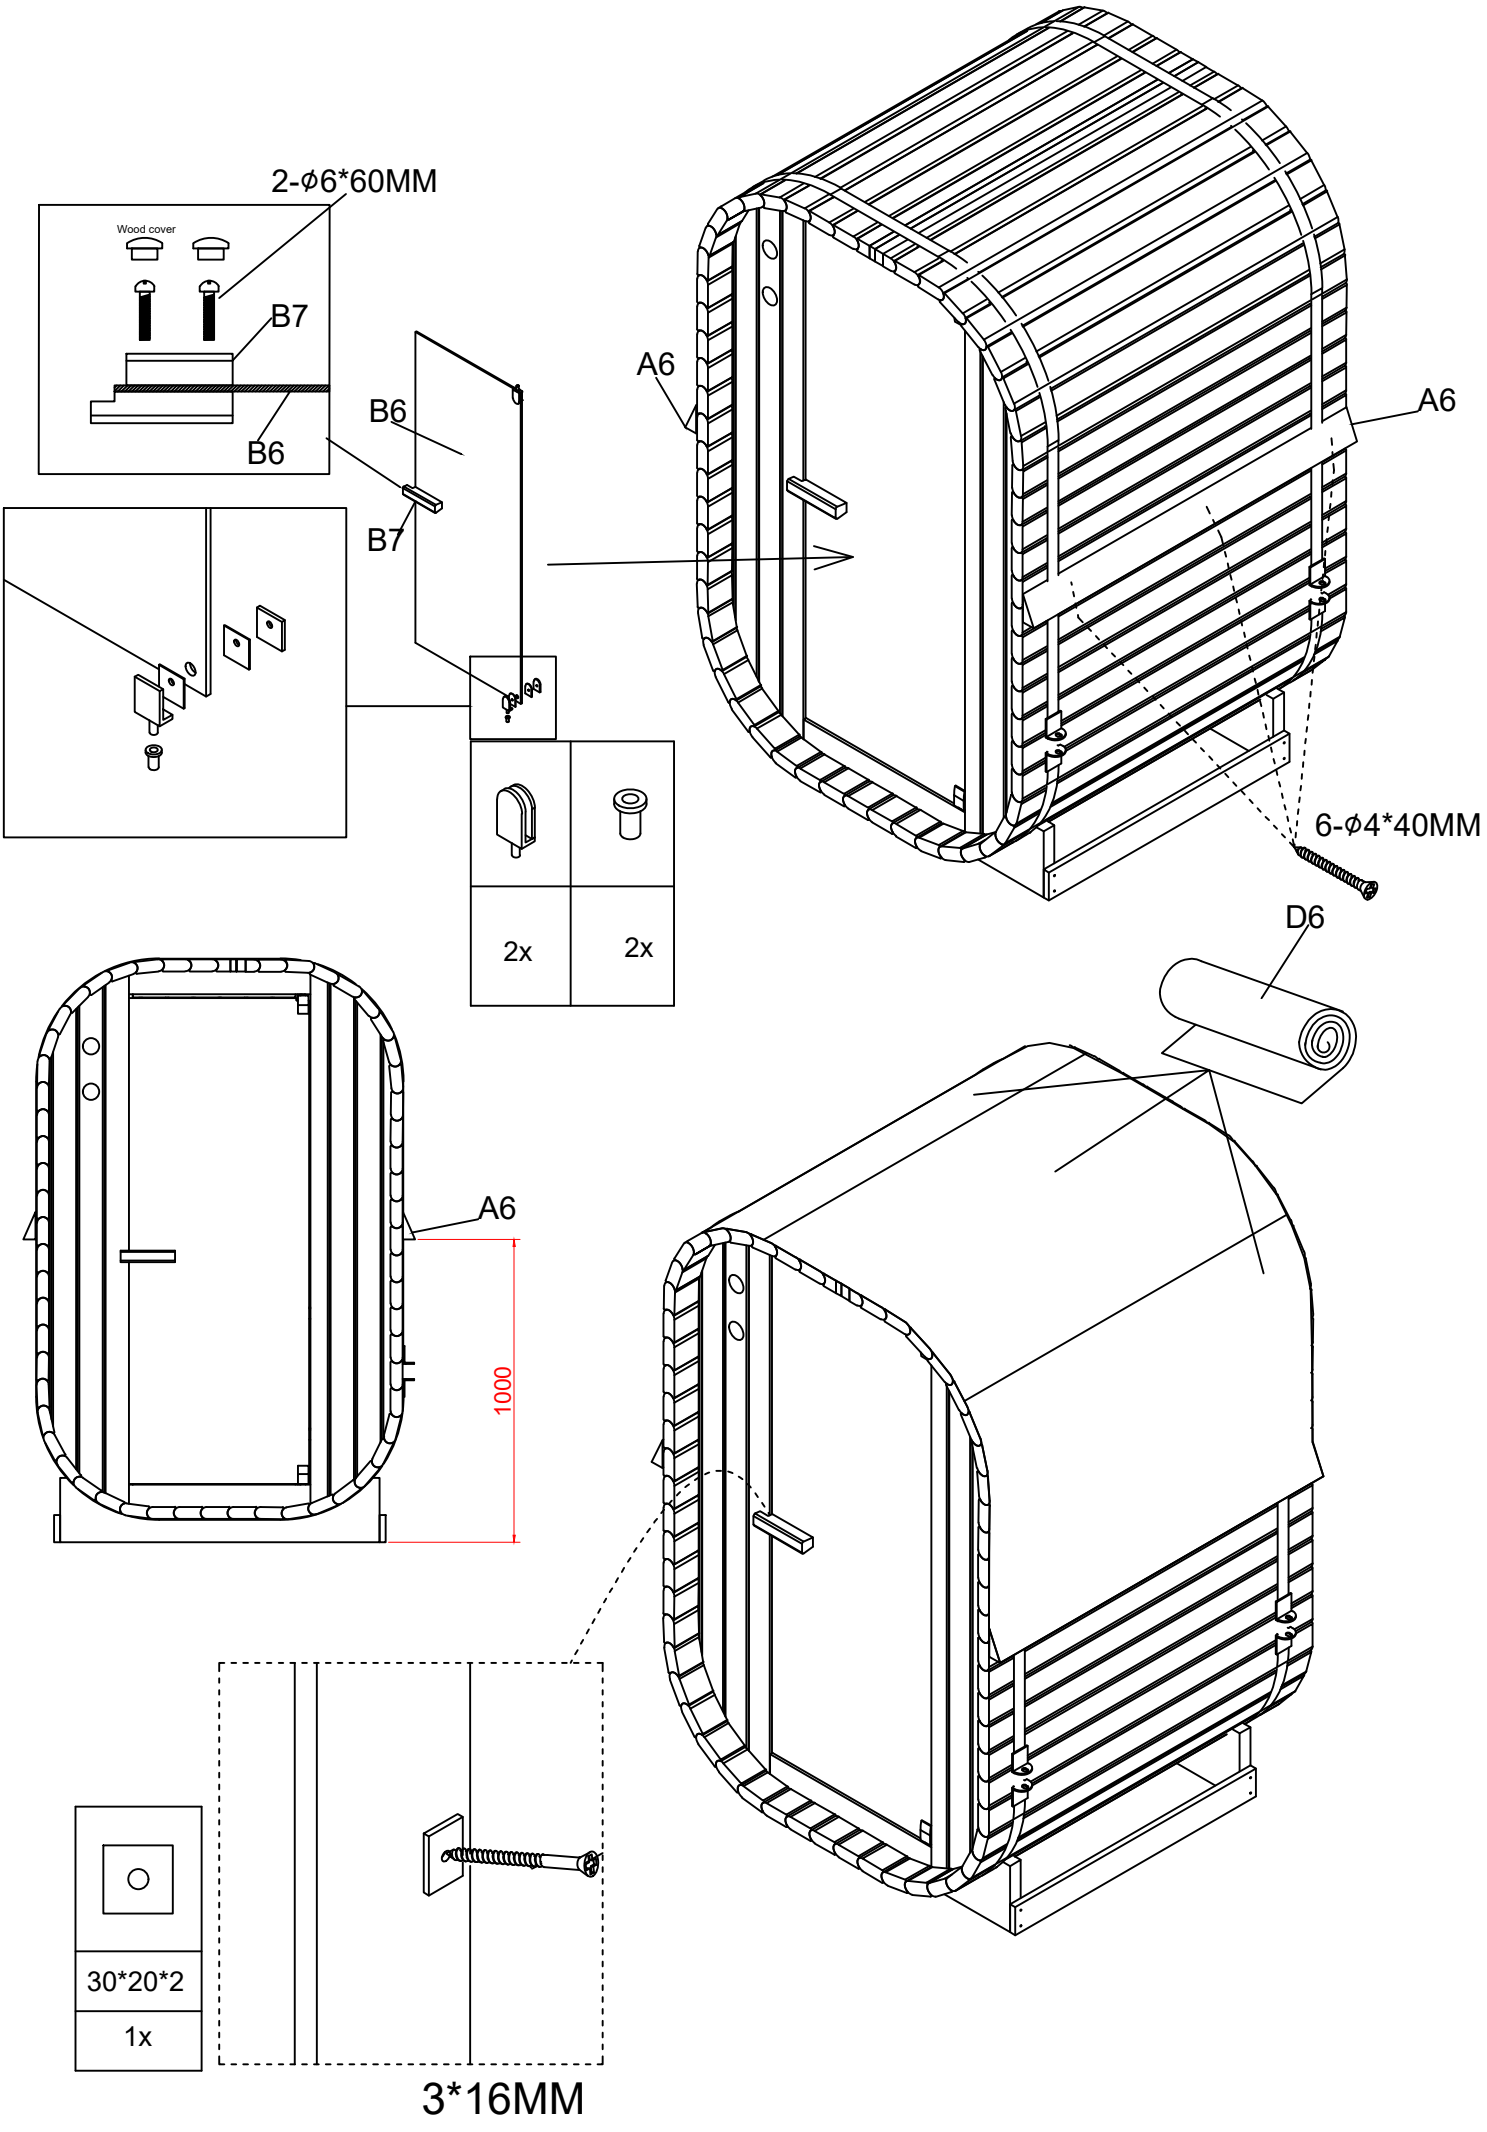


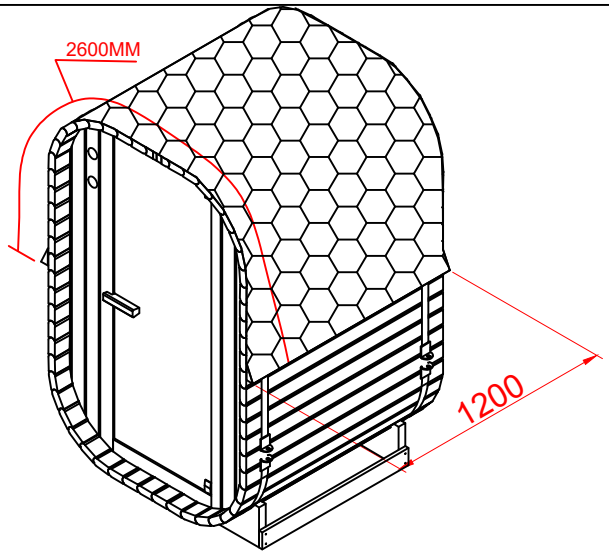


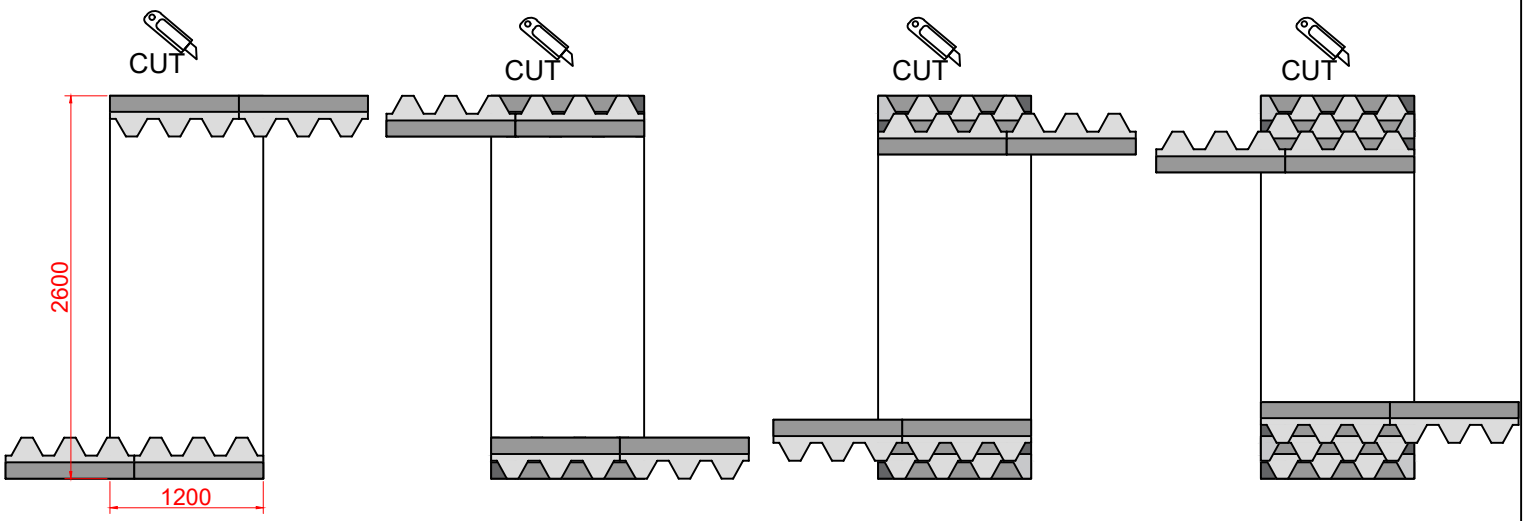

6-φ4*30MM
D4

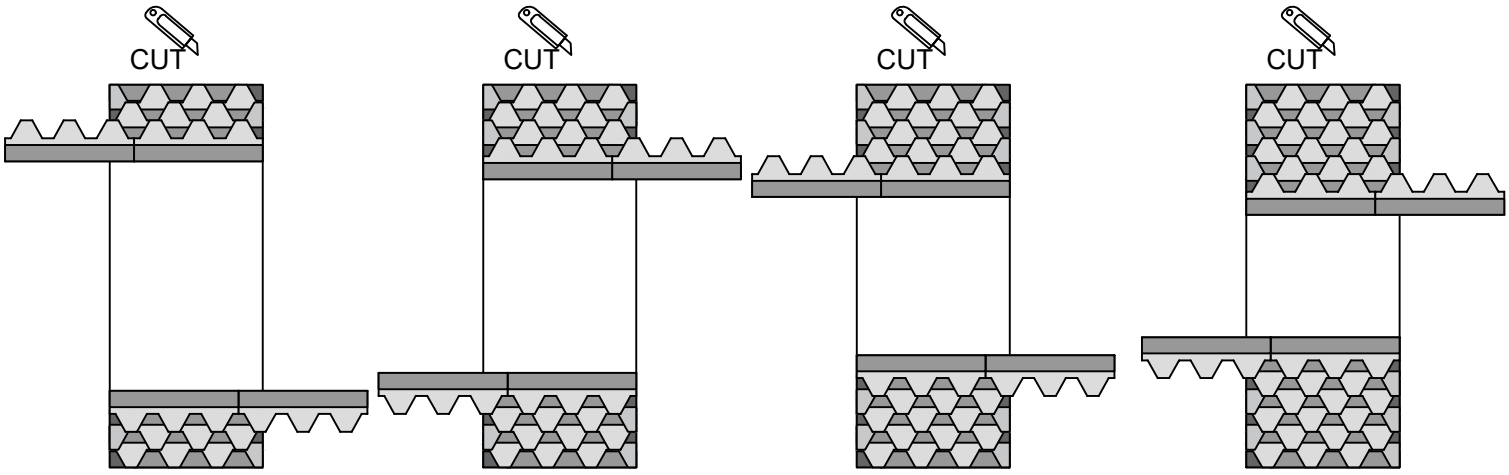

2-φ4*60MM
D1
Power box

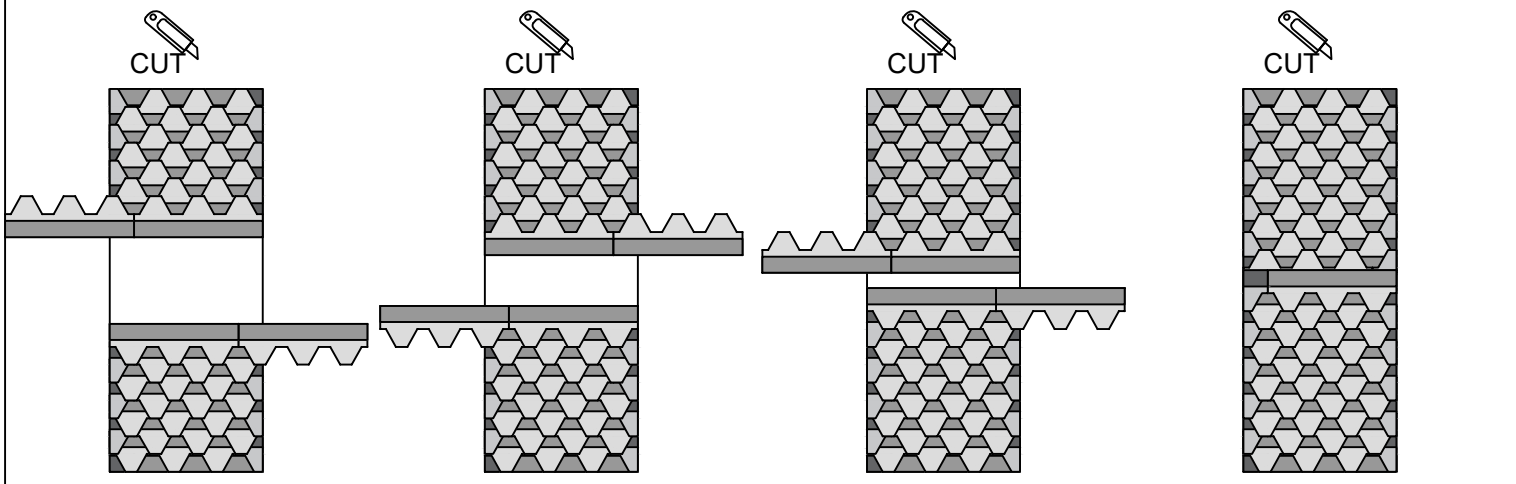

switch
Power box
NC
LED light


2-φ6*60MM
Wood cover
B7
B6
B6
B7
A6
A6
6-φ4*40MM
2x
2x
D6
A6
1000
30*20*2
1x
3*16MM


2600MM
1200


CUT
CUT
CUT
CUT
2600
1200


CUT
CUT
CUT
CUT


CUT
CUT
CUT
CUT

INSTALLATION MANUAL



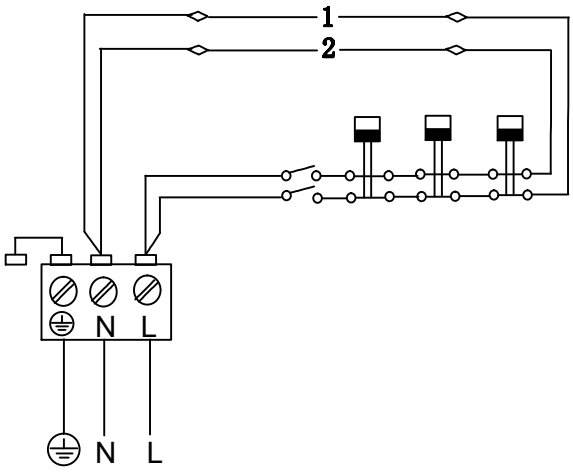
Use ordinary drinking water only, Other materials poured into the stone compartment may damage the heating elements, which is beyond ourguarantee.

WARNNING:

PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE HEATER



Model	Kabel für
3.6KW	220 V 1 ph 240 V 1 ph mm²
	3*2.5



220 V~240 V 1 N~



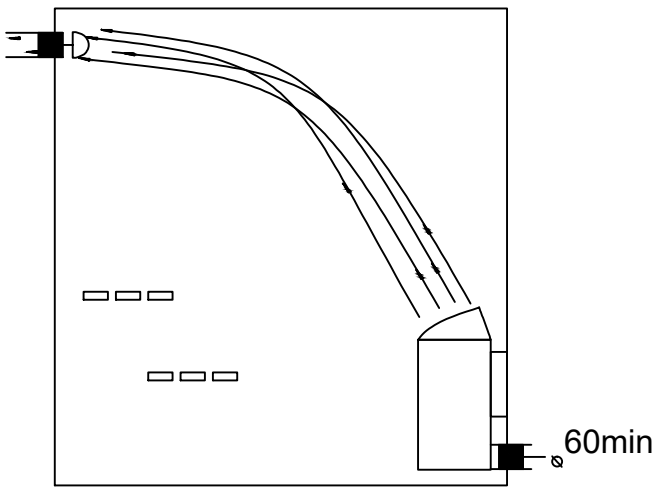
Time controller
0-180Min

Temperature sensor

(1)L---------Connection ports of live wire

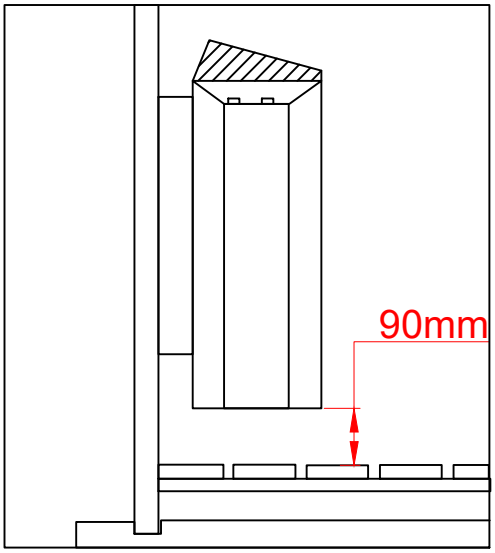
(2)N---------Connection ports of neuter wire

(3) ⏚ ------Connection port of grounding wire



Note:

The sauna stove must be kept at a height of 9 cm from the floor panel.



Installation

Install the heater onto the wall with the screw provided in the heater,

Do not cover the wall behind the heater with materials like asbestos or eternit plates etc., because this sort of covering protection could cause too temperature a risk of burning . Must use qualified materials for the walls and ceiling.

Connection of electricity supply cable

Only the qualifed electrician may conduct the electricity supply connection of the heater' s cables talking into consideration of current, valid electrician safety regulations. The connecting cables of the mains supply to the heater must be of REVE rubber insulated cables or at least an equivalent There are connection ports in the junction box in sauna heater to connect the indicating lamps outside sauna

Sauna stones

Since the sauna stones may be dusty, we recommed that they should be rinsed before being loading into the heater container; the largest ones should be loaded at the bottom. Do not load the stones too tight so that air can easily move between the stones whereby a good even cooling can be got for the heating elements. Reload when stones broken or crumbling so that these stones can be got out of the heater before the heating elements get damaged. Load adequate sauna stones(10- 15kg) into the sauna heater after finishing the installation of sauna heater

Attention : Sauna stones must be of finest qualities because temperature inside sauna heater is extremely high Stones not be able to withstand heat and great changes easily break or get crumbling and damage the heating elements, or are easily oxidized whchi in return counteract the thea circulation and damage the sauna heater while being heated or being thrown water to for vapors causes.

Temperature control

The thermostat can control the temperature in an idea condition Sauna heater can reach to a preset temperature in 30 to 60 minutes depending on the size of sauna room.

Time control

The time control switch is the main control switch of sauna heater which should be switched off while leaving sauna.

Warning

1. Electrical shock hazard-- there are no owner serviceable parts in sauna heater. To avoid electrical shock hazard, all installations and relevant service shall be performed by qualified persion
2. Sauna should be less than half an hour. Bathing too long may cause heart beating too fast, light heartache, feeling weak or dizzy, should the bather stop bathing immediately as soo as the above symptoms occur.
3. Sauna bath may cause tension to the bather. Thus, one who is one of the followings should be directed by physician.
   A. Being pregnant B. Having heart disease C. Having high blood pressure D. Not feeling well
   E. After drinking F. After taking medicine G. Diabetes H. Having circulation system disease
4. Chirldren must be under the acompany of adult in taking sauna bath.
5. Rist of scald: Must not touch the sauna heater or trim during heating, as it is hot. Stay at least 30cm away from the hot heater

Guarantee

1. Sauna heater is under one year guarantee
2. The following situations are not guaranteed:

a) Installation or internal structure disassembling by unprofessional person
b) Supply voltage fluctuation range ＞±10%
c) Unqualified rocks on sauna heater' s compartment

SERVICE

Use instructions

Drink plenty of liquids before and after use sauna.

Dry yourself off completely.

The optimal cabin temperature for a pleasant session lies between 35 and 60 .

After a heating period of an hour at the latest, the cabin should be switched off and a heating brake of at least 30 minutes should be taken.

Maintenance instructions

Clean the cabin with a damp cotton towel, dry with a clean dry towel.

Clean the glass with a window/glass cleaner and a soft cloth.

For cleaning purposes, use a cleaning

cloth that has been only slightly moistened with a mild soapy solvent (dish detergent).

Do not use chemical detergents to clean the cabin.

Please fasten the screws of the bench once every three months, avoid the loose or drop off.

It is recommended to take a warm shower and relax after use.

Notes:

_____

_____

_____

_____

_____